



Instructions For Use

BIG Candy Corn 2

Issue Date: March 20, 2025
Revision: 1.0

Model: 1000077
UDID: 5001115034

 <p>AbleNet, Inc. 2625 Patton Road Roseville, MN 55113 United States of America www.ablenetinc.com</p>	 <p>EUCEREP Roald Dahllaan 33, 5629MC Eindhoven The Netherlands eucerep@eucerep.com</p>	<p>UK Responsible Person</p> <p>EUCEREP LTD 7 Tibbets Close, Meeting Lane Alcester, Warwickshire B49 5QU England, United Kingdom</p>
---	--	--

 <p>MedEnvoy Switzerland Gotthardstrasse 28 6302 Zug Switzerland Telephone: +41 41 562 01 42</p>

INTENDED PURPOSE

This switch is used to give access to items that are not normally accessible because of issues with cognitive or motor control.

CLINICAL BENEFITS OF THE DEVICE

Allows patients to access technology when they would not have the motor or cognitive skills to operate another device.

PERFORMANCE CHARACTERISTICS AND INFORMATION FOR HEALTH CARE PROFESSIONAL

Switch Type: Electronic, Wired

Activation Type: Proximity Sensor

Activation Force: Proximity

Feedback: Auditory and visual

Plug Size: 3.5mm mono (TS) plug

Mounting: AbleNet Quick Ready Mounting Plate for Assistive Technology or integrated threaded inserts

Product Dimensions: 3.85-in L x 4-in W x 0.58-in H (9.8-cm L x 10.2-cmW x 1.2-cm H)

Material: Housing - ABS Plastic

Suggested Operating Environment:

Ambient Temperature Range: 32°F - 95°F (0°C - 35°C)

Humidity: 10% - 95% (no condensation on device)

Suggested Transportation and Storage:

Ambient Temperature Range: -25°F - 158°F (-31°C - 70°C)

Humidity: 10% - 95% (no condensation on the device)

RISKS, WARNINGS, AND CONTRA-INDICATIONS

BIG Candy Corn 2 is neither waterproof nor completely water resistant. Do not immerse BIG Candy Corn 2 in water or any other liquid. Make sure that no liquids are spilled on BIG Candy Corn 2.

BIG Candy Corn 2 is not recommended to be used as access to a call system.


DEVICE OVERVIEW



1	Proximity sensor activation surface
2	3.5mm mono (TS) switch plug



3	On/Off Switch
4	Battery Cover

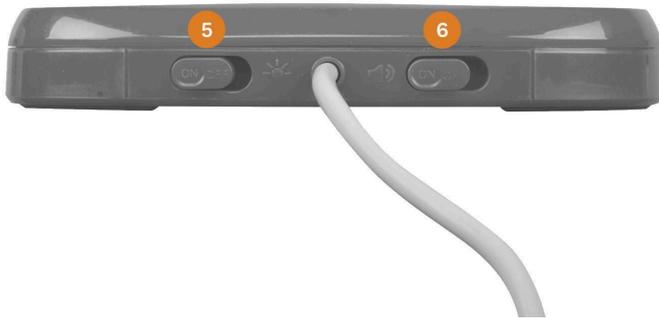

5	Visual feedback on/off switch
6	Auditory feedback on/off switch

USE INSTRUCTIONS

First Time Use

1. Open the battery cover by rotating the D-ring counterclockwise and lifting up.
2. Insert 2 AAA batteries.
3. Close the battery door and lock by rotating the D-ring clockwise.
4. Plug BIG Candy Corn 2 into any switch adapted device with a standard, mono 3.5mm switch jack.
5. Turn BIG Candy Corn 2 over, and move switch to “on”.
6. Once BIG Candy Corn 2 is activated, any attached device will activate.

Controlling Feedback (Audio/Visual)

BIG Candy Corn 2 offers the user visual feedback with three LED lights and auditory feedback with a beep when the switch is activated. Both of these features can be turned On and Off using the toggle switches located on the side of the BIG Candy Corn 2.

The toggle switch for auditory feedback has a speaker icon located next to it. Move the toggle switch to turn auditory feedback on or off.

The toggle switch for visual feedback has a light icon located next to it. Move the toggle switch to turn visual feedback on or off.

Changing the Battery

To replace the batteries in BIG Candy Corn 2 you will need 2 AAA batteries. When you are ready to replace the batteries, turn BIG Candy Corn 2 over.

On the back of the device, lift up and turn the D-ring to open the battery compartment.

Remove the old batteries.

Place 2 new AAA batteries in the battery compartment. We recommend always using regular, alkaline batteries to avoid any issues with recording or playing messages. Batteries labeled “Heavy Duty,” “Industrial Grade,” or “ProCell” handle power differently than regular alkaline batteries, and when used in our devices they behave similar to low or dead batteries.

Replace the battery cover, then turn the D-ring and push down to lock the compartment.

Mounting

BIG Candy Corn 2 can be mounted in a variety of different ways.

For flat surfaces and simple mounting, try Velcro® or dual lock.

For mounting with screws, the BIG Candy Corn 2 has two threaded inserts designed to be used with size 6-32 screws (6 mm maximum screw length).

PREPARATORY TREATMENT

Cleaning and disinfecting your AbleNet assistive technology devices between uses is essential to the health and safety of the user. To help fight against the spread of germs, here are some helpful steps to cleaning and disinfecting your AbleNet device.

Always be sure to wear the appropriate personal protective equipment such as protective gloves and safety glasses.

Cleaning Your Device

Before disinfecting your device, remove any dirt or debris that may be on the device.

1. Turn the device off and remove the batteries.
 1. Remove any large chunks, visible heavy dirt, or debris that is attached to the device.
2. Wipe down the device with cleaning wipes.
3. Use a cotton swab soaked with cleaner to get into any tight areas that were not accessible with the cleaning wipes.
4. Let the device completely dry.

Disinfect Your Device

Now that the device is clean, it is time to disinfect it. Changing protective gloves may be required before disinfecting the device to ensure no dirt or debris is transferred back to the device.

1. Make sure the device is still turned off and that the batteries are removed.
2. Use a clean towel or wipes with Virucidal, Bactericidal, Pseudomonacidal, Tuberculocidal, or Fungicidal to disinfect the surfaces of the device. It is important to note that these chemicals only disinfect when they are wet and should be left wet on the device for at least 4-minutes.
3. Use a cotton swab soaked with Virucidal, Bactericidal, Pseudomonacidal, Tuberculocidal, or Fungicidal to disinfect the tight areas that were not accessible with the towel or wipes. Make sure the chemical stays wet on the device for at least 4-minutes.
4. Let the device air-dry entirely before using it.

TROUBLESHOOTING

Switch is Non-Responsive

1. Verify either the Sound or Lights switch is turned on. If both are turned off - switch will not show any feedback.
2. Change Coin Cell Battery

Switch is not controlling what it is plugged into.

1. Inspect cord for any physical damage.
2. Plug switch into another device that is working with another switch.

PREVENTATIVE AND REGULAR MAINTENANCE

Clean the BIG Candy Corn 2 if necessary. No scheduled maintenance is required.

REUSABLE

BIG Candy Corn 2 should be sent back to the manufacturer for cleaning, testing and refurbishment before reuse with another patient.

DEVICES USED TOGETHER WITH

Switch Adapted Toys
HITCH 2
Blue 2 FT
Powerlink 4
AbleNet speech devices

Other adapters or toys that are designed with 3.5mm-mono plug for switch use.

PROPER DISPOSAL

BIG Candy Corn 2 contains a coin cell battery and electronic components and should not be disposed of in your normal home or business waste collection. BIG Candy Corn 2 should be disposed of with a licensed electronics recycle.

WHEN TO CONTACT A HEALTHCARE PROFESSIONAL

If you have difficulty accessing the switches or need assistance with product placement.

Change in your condition.

NOTICE OF SERIOUS INCIDENT

Notice - If any serious incident has occurred while using this device, seek medical attention and then - please report to AbleNet, Inc and your competent authority of the member state in which you are in.